

MicroStation

Toggle Dimension Witness Lines

Did you know that if you Key-in *Change Dimension Witness* you can toggle on or off the dimension witness line (AKA-extension lines) once it has been placed in you design file? To turn the dimension witness line off point to the visible portion of the witness line and accept the line. To turn the dimension witness line back on it is a little more tricky, point to the dimension line close to the arrow and it should toggle back on. Sometimes it takes a few picks, but usually is successful.