

CDOT Annotating Horizontal and Vertical Alignments



This document demonstrates the procedure for displaying annotation for horizontal and vertical alignments. It further presents the workflow for annotating horizontal alignments that contain spiral components.

InRoads can display most alignment annotation as per the M&S standards. However some annotation will require editing and/or repositioning using standard MicroStation commands.


Annotating a Horizontal Alignment

Two InRoads commands are required to annotate a horizontal curve in the CDOT format. The first command (horizontal annotation) is used to display the linework and annotate the tangents. The second command (horizontal curve set annotation) is used to display the PI symbol, short tangents, and curve data. Once the InRoads annotation tools have been used the user needs to modify the text content and positioning to have it appear as per the M&S standards.

Display the alignment


This first example illustrates annotating a circular curve. This is followed by the workflow required for annotating circular curves with spiral transitions.

1. Display the horizontal alignment using **Geometry > View Geometry > Horizontal Annotation**. The **View Horizontal Annotation** dialog will appear.

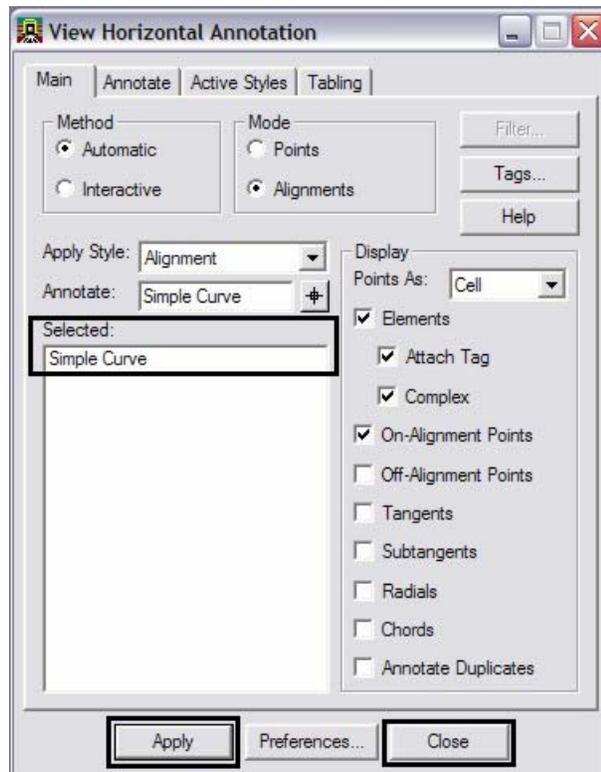

2. Select the correct alignment for display (**Annotate** field). <D> **Apply** then <D> **Close**.

CDOT Annotating Horizontal and Vertical Alignments.pdf

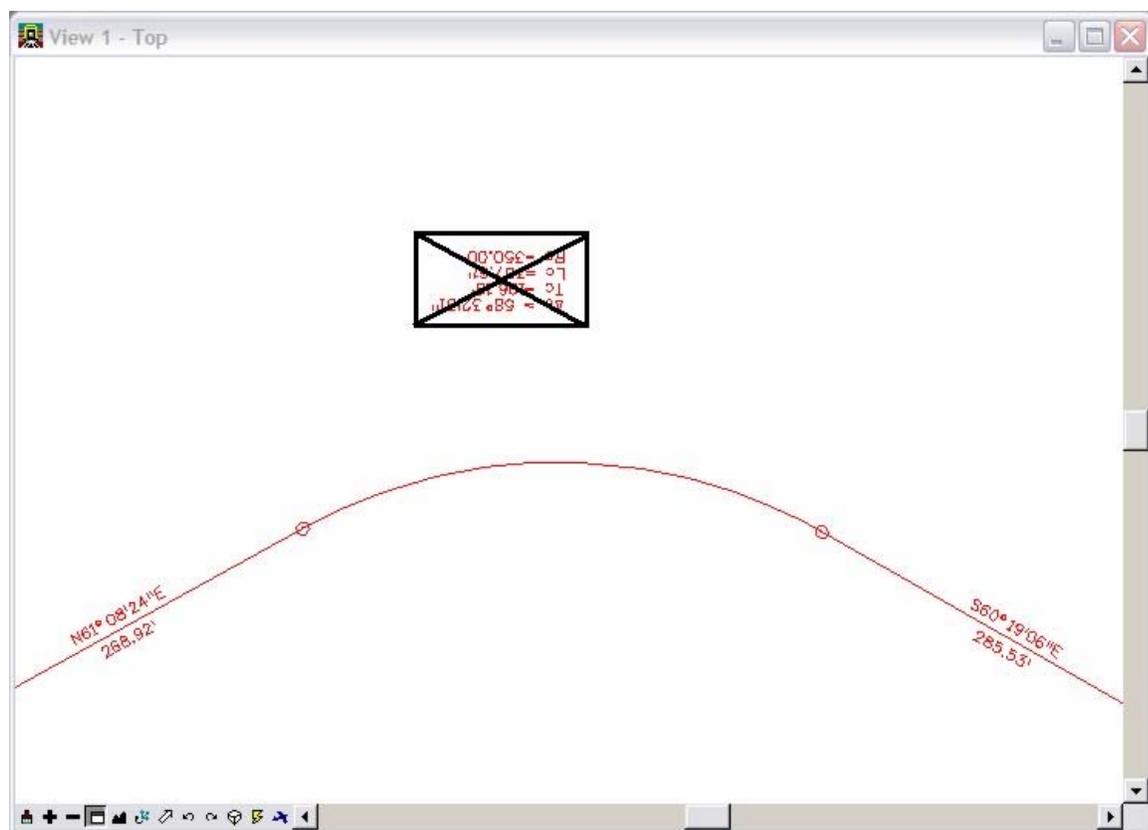


3. Use the MicroStation **Delete Element** command to remove the curve annotation from the display, as this information will be redisplayed in the following steps.

Note: Prior to deleting the curve information, the MicroStation '*Graphic Group*' lock must be disabled (**Settings > Locks**). Otherwise the entire alignment will be deleted.


CDOT Annotating Horizontal and Vertical Alignments.pdf

4. Display the Curve Annotation using **Geometry > View Geometry > Curve Set Annotation**. The Curve Set Annotation dialog will appear.
5. In the **Main** tab, select the correct **Horizontal Alignment** (**Simple Curve** in this example) from the drop down list.

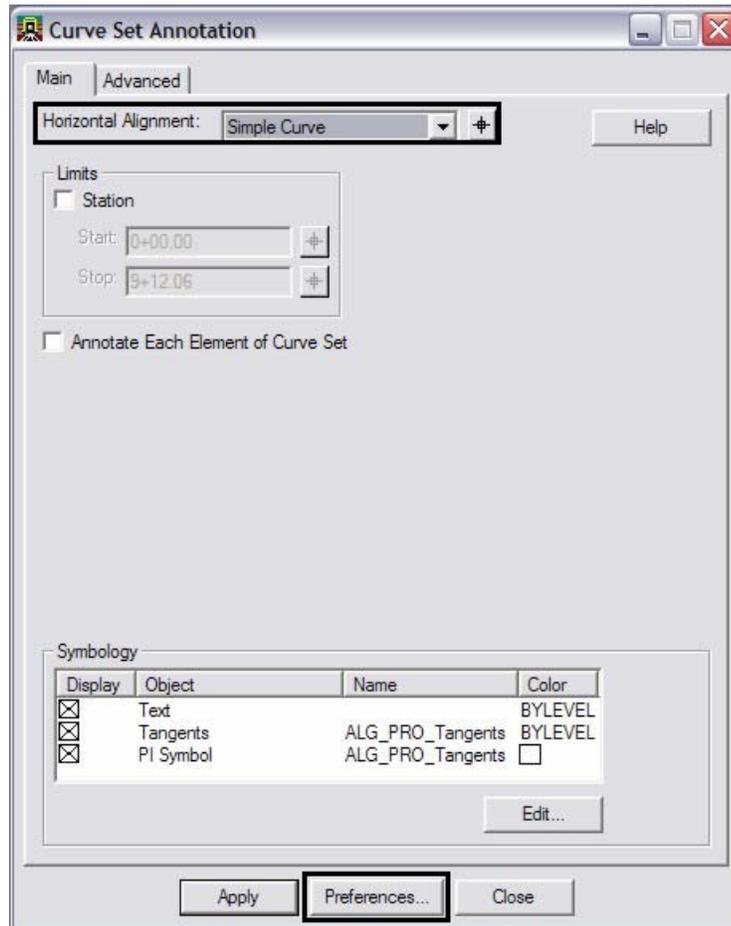

CDOT Annotating Horizontal and Vertical Alignments.pdf

- <D> **P**references, as shown above, and choose the appropriate *Spiral* preference (**Proposed Spiral** as shown below). <D> **L**oad and then <D> **C**lose

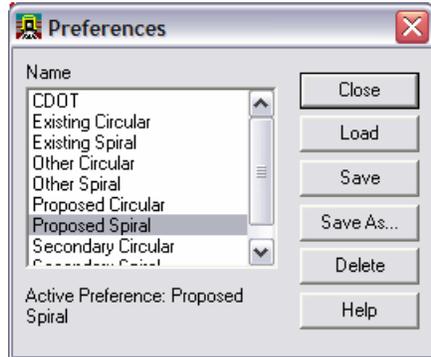


Note: The preferences established for spirals serve the dual purpose of annotating curves with either circular or spiral components. The central curve information required is common between the two types of geometry.

The InRoads **Write Lock** must be set to **PEN** mode prior to the next command. The curve requires annotation twice and PEN mode will retain previous annotation displays.




- <D> **A**pply on the **Curve Set Annotation** dialog. The central curve is annotated

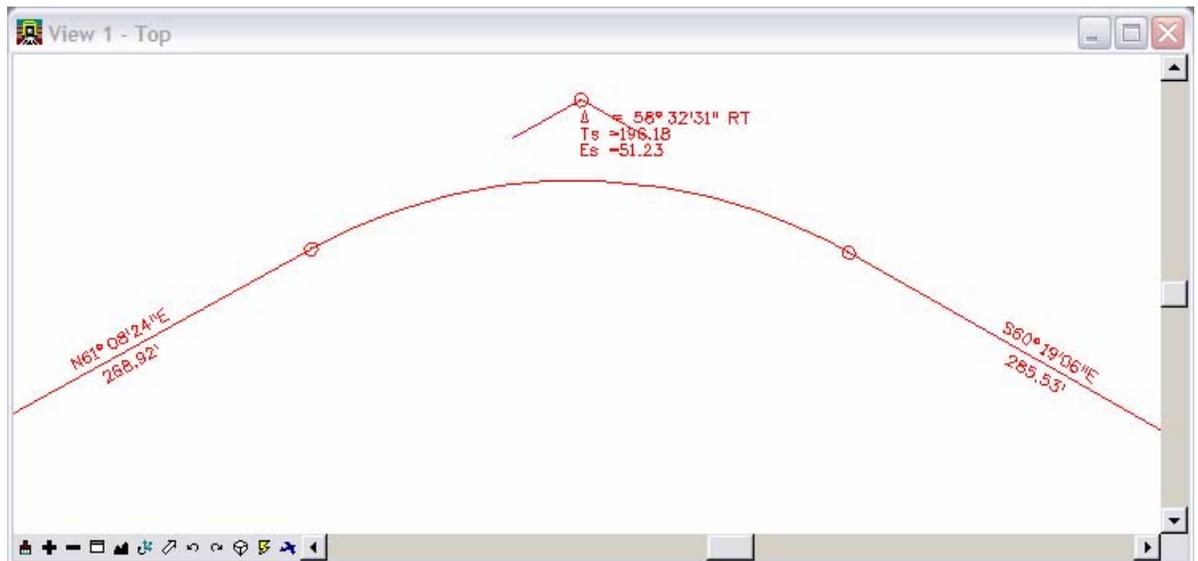


CDOT Annotating Horizontal and Vertical Alignments.pdf

8. <D> Preferences again and choose the appropriate *Circular* preference (**Proposed Circular** as shown below). <D> Load then <D> Close

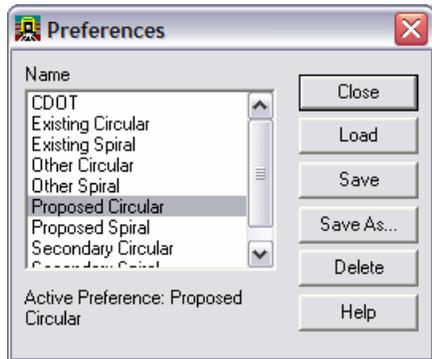

9. <D> Apply on the Curve Set Annotation dialog. The remainder of the central curve information is annotated

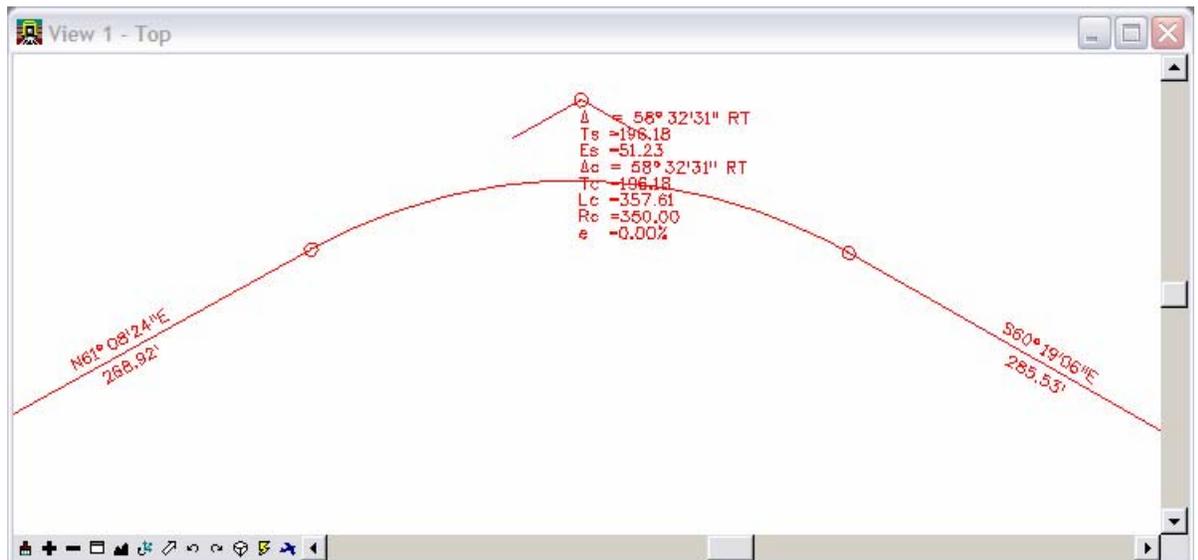


Note: The M&S standards specify that curve information should include the Mean Design Speed (MDS) and Stopping Sight Distance (SSD) information. This information is not annotated by InRoads and will have to be added with MicroStation.

10. Select the MicroStation Edit Text command




11. Select the desired text. The text editor will appear allowing the user to add the required information for MDS and SSD.

CDOT Annotating Horizontal and Vertical Alignments.pdf

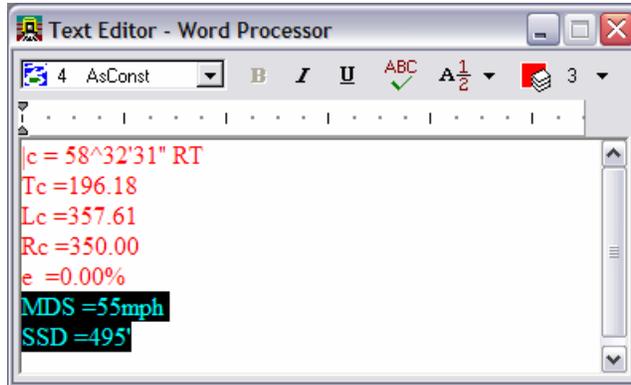


12. Use MicroStation commands to reposition the text as desired.

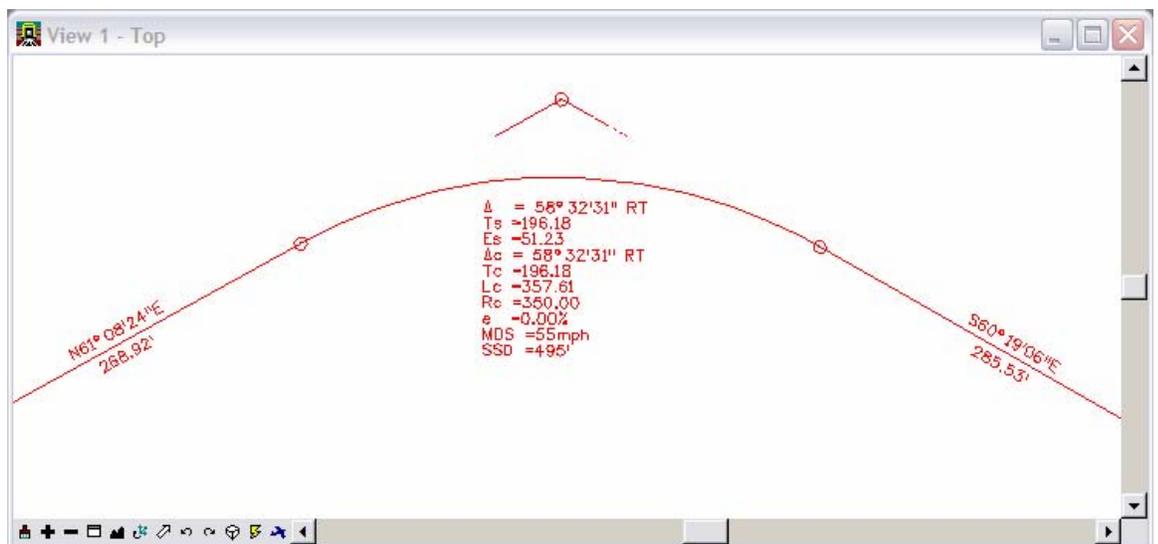

CDOT Annotating Horizontal and Vertical Alignments.pdf



13. If necessary, display the alignment stationing by selecting **Geometry > View Geometry > Stationing**

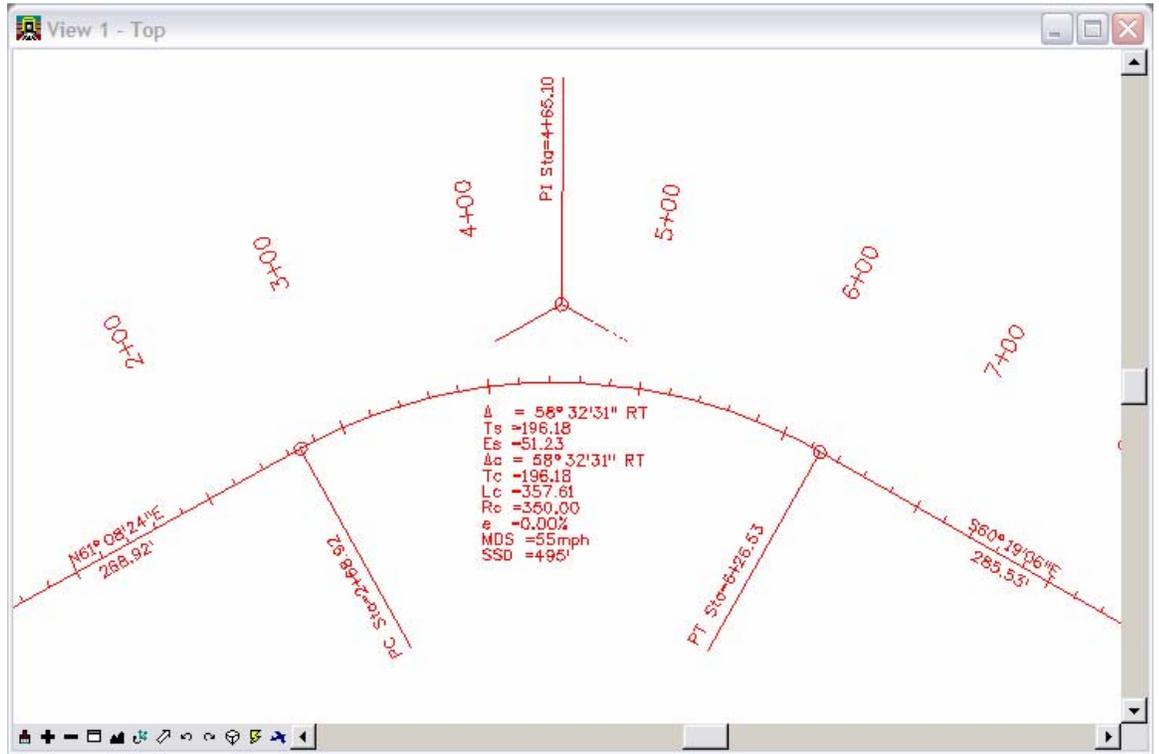

Annotating a Horizontal Curve – Spiral Curve

The workflow is almost identical to the above steps 1-12. The exceptions are noted below.

14. Display the horizontal alignment using
Geometry > View Geometry > Horizontal Annotation

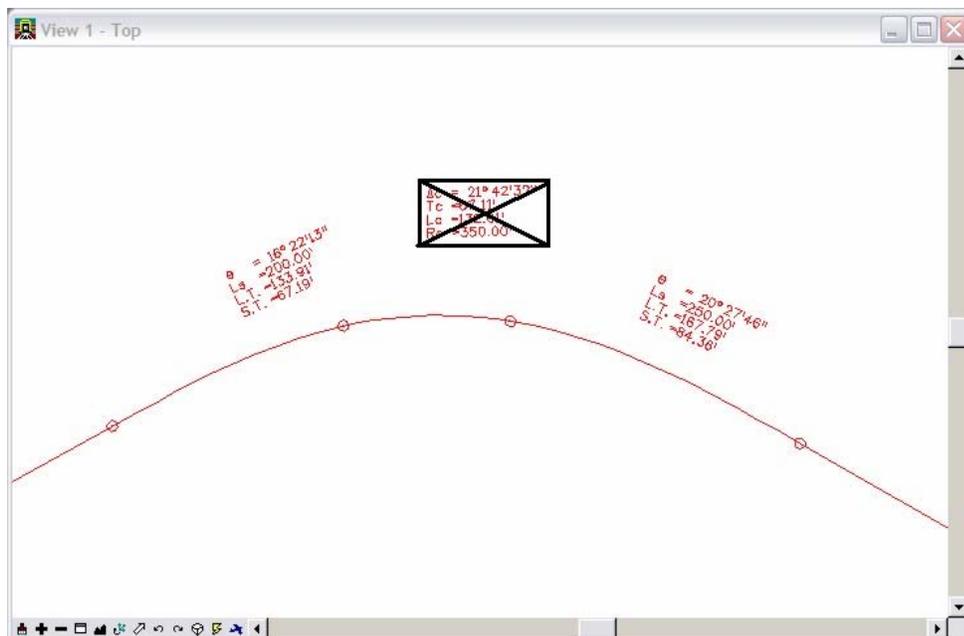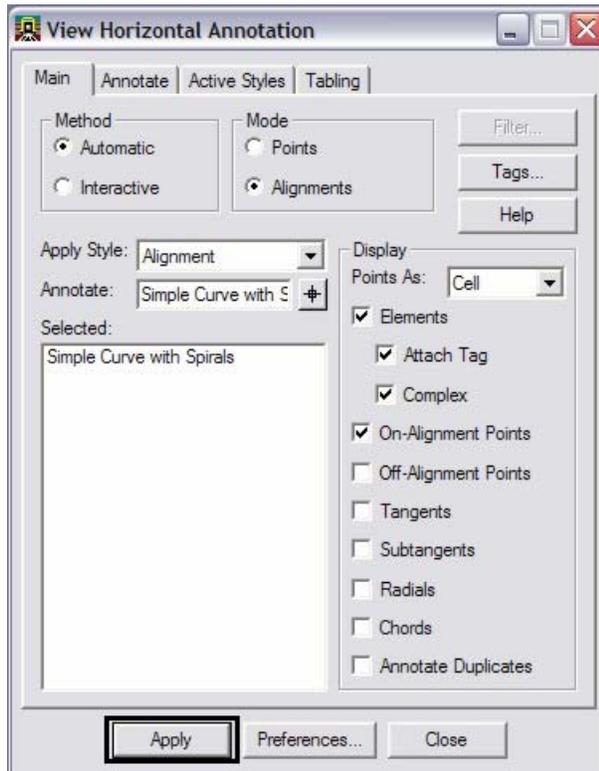


CDOT Annotating Horizontal and Vertical Alignments.pdf

15. Use the MicroStation Delete command to remove the central curve data leaving the spiral curve annotation intact.

Note: Prior to deleting the curve information, the MicroStation 'Graphic Group' lock must be disabled (**Settings>Locks**). Otherwise the entire alignment will be deleted.

16. Follow steps 4-12 above to complete the annotation.

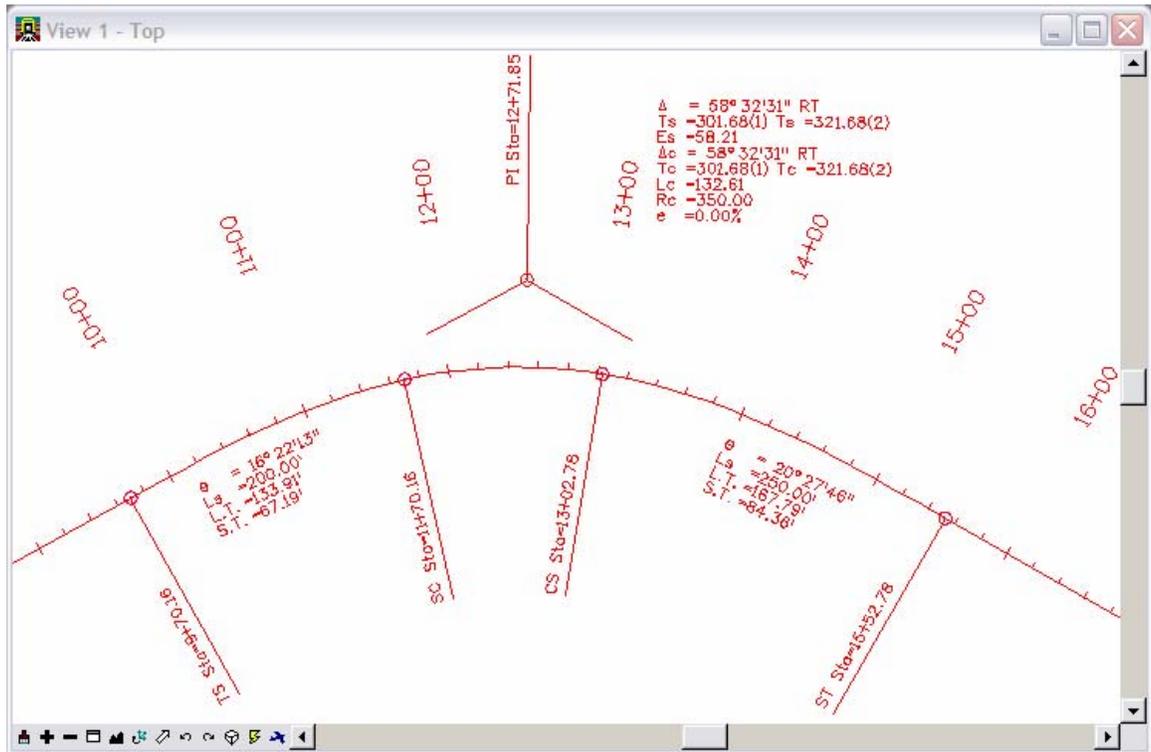


Annotating a Vertical Curve


Display the Alignment

1. The first step is either have, or generate a profile view along the alignment using **Evaluation > Profile > Generate Profile**.
2. Display the vertical alignment using **Geometry > View Geometry > Vertical Annotation...**
3. Select the appropriate Profile Set, Horizontal Alignment, and Vertical Alignment

CDOT Annotating Horizontal and Vertical Alignments.pdf

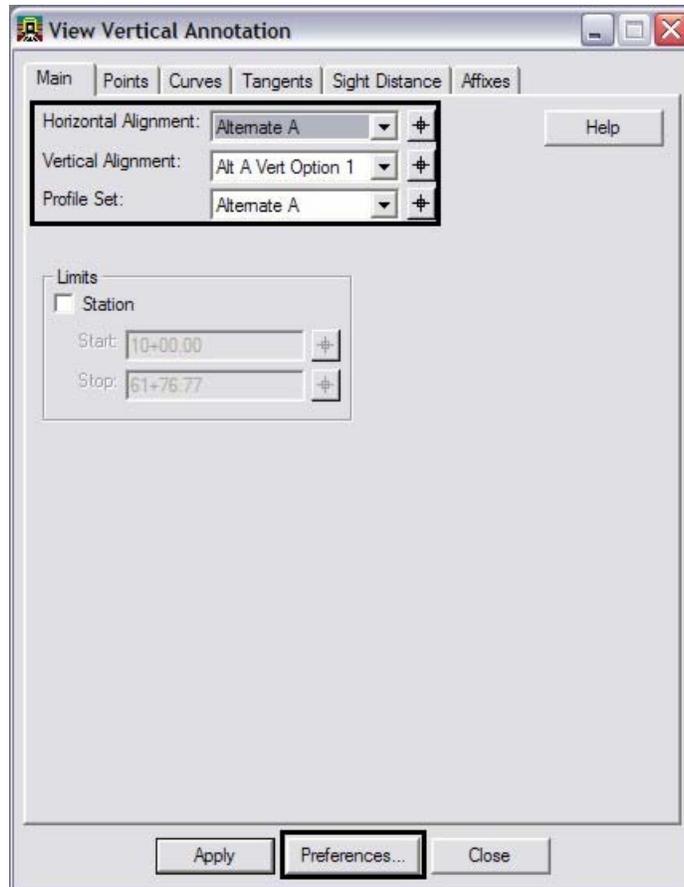

4. <D> Preferences and load the preference for the appropriate symbology (**Proposed** in example below). <D> Load then <D> Close

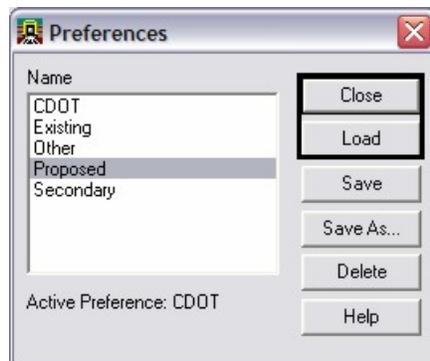

5. <D> Apply on the View Vertical Annotation dialog, the annotation will be generated.

